

THE Blue Rooster COMPANY



www.TheBlueRooster.com


1-800-303-4312

Assembly Instructions

Prior to assembly, please read these instructions carefully. We suggest you carry out assembly on a soft surface to avoid scratching the paint. Please note that because of the nature of the cast metal, you may find roughness on the surface and the design. This “one of a kind” look enhances the beauty of the product and is not a defect.

PARTS LIST

1. Rain Lid
2. Spark Screen
3. Neck
4. 3 Neck Bolts (attached to body)
5. Grilling Grate
6. Body
7. Bottom Plate (attached to body)
8. Latch Hook with 2 Bolt Assemblies
(remove latch hook located inside the body)
9. Mouth Screen with 2 Bolt Assemblies
10. 2 C-Rings with 2 Portable Handles/Rings
(attached to each side of body)
11. Fire Grate (2 pieces)
12. 3 Legs
13. 6 Leg Bolt Assemblies (attached to legs)

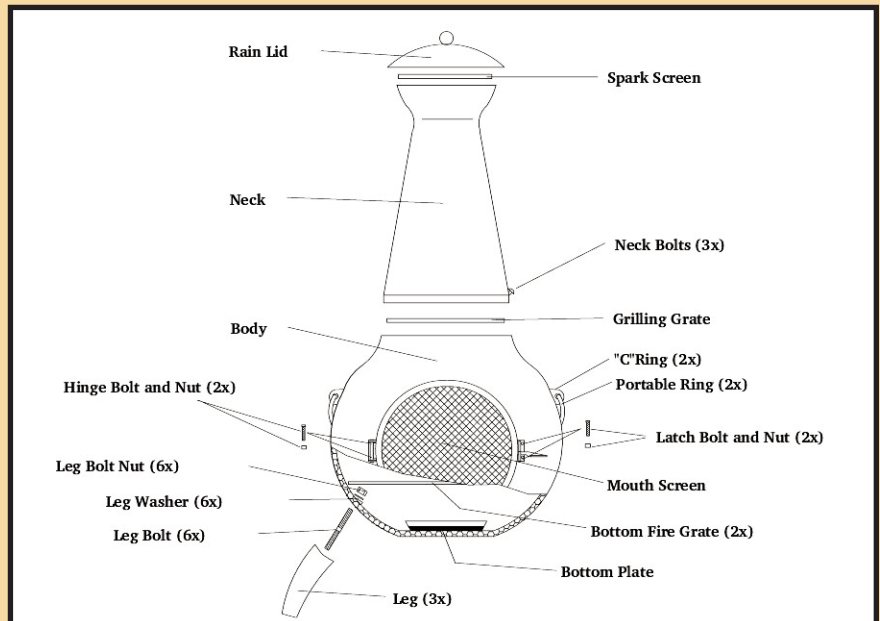

ASSEMBLY

TOOLS NEEDED: Phillips screwdriver, 4mm allen wrench and ratchet with 10mm and 14mm sockets. 13mm socket (CI only)

Once you've unpacked your chiminea make sure that all your pieces are there according to the diagram.

1. Turn the body of the chiminea upside down. Attach the legs, using the leg bolt assemblies, through the leg holes in the chiminea. Turn the chiminea right side up again.
2. Attach the latch hook using the holes on the right side of the mouth as you look at the chiminea (latch hook is attached to the inside of chiminea body, remove and attach to outside). Be sure to leave the bolts only semi tight until the mouth screen can be aligned. Attach the mouth screen using the holes to the left side of the chiminea mouth. Align the latch and mouth screen and tighten all bolts.
3. Place the bottom fire grate (2 pieces) inside the chiminea making sure it rests securely and level.
4. The grilling grate is for grilling only and should not be left in the chiminea. When grilling, remove the neck of the chiminea and place the grilling grate (medium size) on top of the body. Remove the grate when done grilling before replacing the neck.
5. Place the neck on the body. Tighten the 3 neck bolts so that the neck cannot be easily displaced.
6. Place the spark screen in the top of the chiminea neck.
7. Place the rain lid on the top. Remove the rain lid when the chiminea is in use.