

CEDAR DECK CHAIR ASSEMBLY

G) Chair Back



H) Chair Base




I-R) Right Chair Arm/Leg Section



I-L) Left Chair Arm/Leg Section



- A) Carriage Bolts (10 @ 2 1/2", 2 @ 2")
- B) Nuts (12)
- C) Washers (12)
- D) Lock Washers (12)

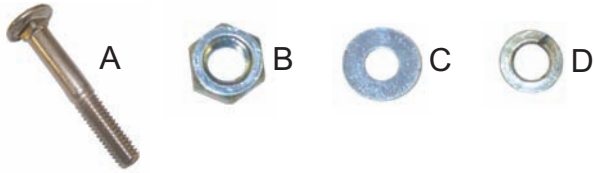

ASSEMBLY INSTRUCTIONS

- Step 1. Place chair base (H) on a non-marking surface.
- Step 2. Attach front of right arm/leg section (I-R) to chair base (H) by inserting 2 1/2" carriage bolt (A) into arm/leg section through the base and attach washer (C), then lock washer (D), then nut (B) and tighten.
- Step 3. Repeat on the back of right arm/leg section.
- Step 4. Repeat steps 2 and 3 to attach left arm/leg section (I-L).

Step 5. Slide chair back (G) down into chair base (H) with the brace under the last slat, lining up holes.



- Step 6. Attach chair back (G) to arm/leg section (I-R) by inserting 2 1/2" carriage bolts (A) into the top hole of the arm/leg section (I-R) and loosely attach washer (C), then lock washer (D), then nut (B).
- Step 7. Repeat step 6 on left arm/leg section (I-L).



- Step 8. Insert 2" carriage bolts (A) through the holes from the top side of the last slat of the chair base (H) down through the chair back (G), then loosely attach washer (C), then lock washer (D), then nut (B).
- Step 9. Tighten all hardware.



Assembled Cedar Deck Chair



www.TheBlueRooster.com
1-800-303-4312